

How to install tX-USBhubIN with sCLK-12.0

Product user guide

The combo of tX-USBhubIN and sCLK-12.0 leads the audio sound quality to the utmost. The sCLK-12.0 helps tX-USBhubIN to perform the higher level of purified, detailed and accurate sound by purifying audio band jitter noise.

Precaution


The combo includes the modified tX-USBhubIN kit, the original tX-USBhubIN can not be used with sCLK-12.0 without the special modification.

Supplies

- tX-USBhubIN Kit
- sCLK-12.0 with bracket
- RF Cable for Clock Signal : 40cm
- SATA Power Gender
- Power Cable for sCLK-12.0 : 30cm

How to install the combo

- 1 Install tX-USBhubIN
 - 1.1 Please refer to 'tX-USBhubIN operating instruction' to install tX-USBhubIN properly.
- 2 Install sCLK-12.0
 - 2.1 Put sCLK-12.0 with bracket into the 3.5inch bay inside of PC.
 - 2.2 Power to sCLK-12.0 by the internal PC power supply
 - 2.2.1 Connect the supplied power cable for sCLK-12.0 from the J305 connector on sCLK-12.0 to 12Vdc connector on SATA Power Gender.
 - 2.2.2 Connect the internal PC power supply to the SATA Power Gender.

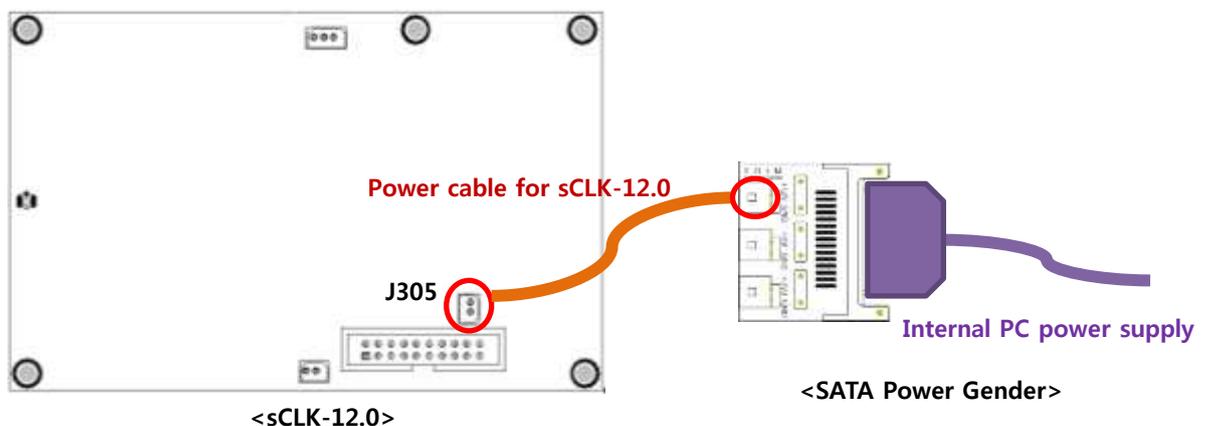

How to install tX-USBhubIN with sCLK-12.0

2.3 Power to sCLK-12.0 by the external power

For using the external power to sCLK-12.0, the tX-USBhubIN should be connected to the external power.


And also the internal power connection is recommended to be made for the safety use.

2.3.1 Separate the switch board of tX-USBhubIN by unscrewing 2 Philippe screws.

2.3.2 Connect the supplied power cable for sCLK-12.0 from the J305 connector on sCLK-12.0 to the J403 on tX-USBhubIN.


2.3.3 Assembly the switch board back by screwing 2 Philippe screws.

2.3.4 Connect the regulated 9V/2A external power to tX-USBhubIN.

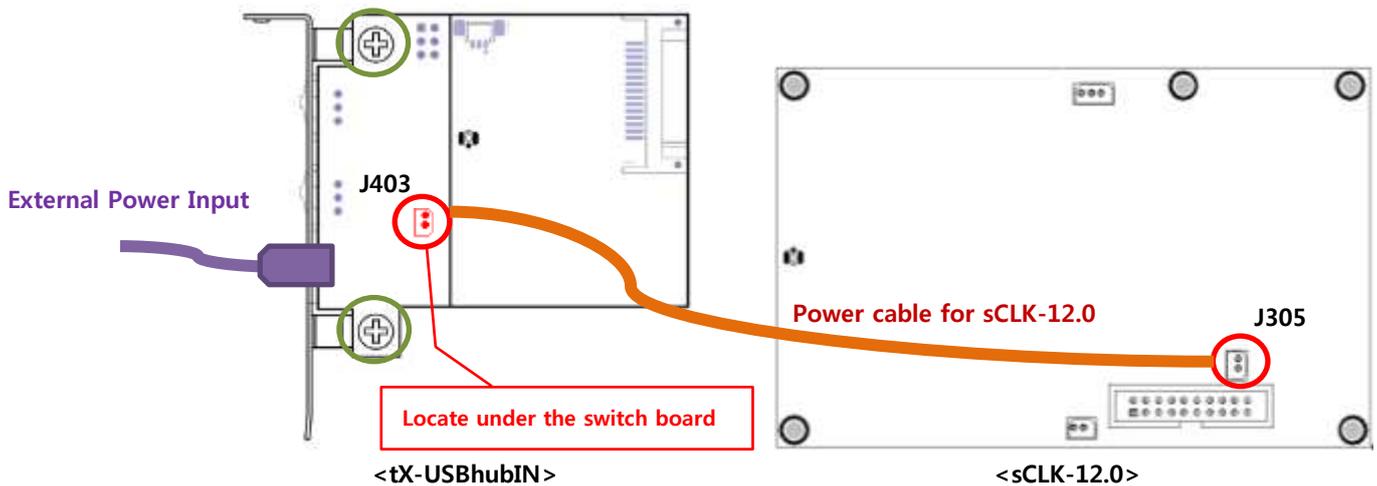

3 Connect tX-USBhubIN and sCLK-12.0 by the RF cable

3.1 To transfer the clock signal, connect J301 RF connector on tX-USBhubIN to J304 RF connector on sCLK-12.0 by the supplied RF cable.

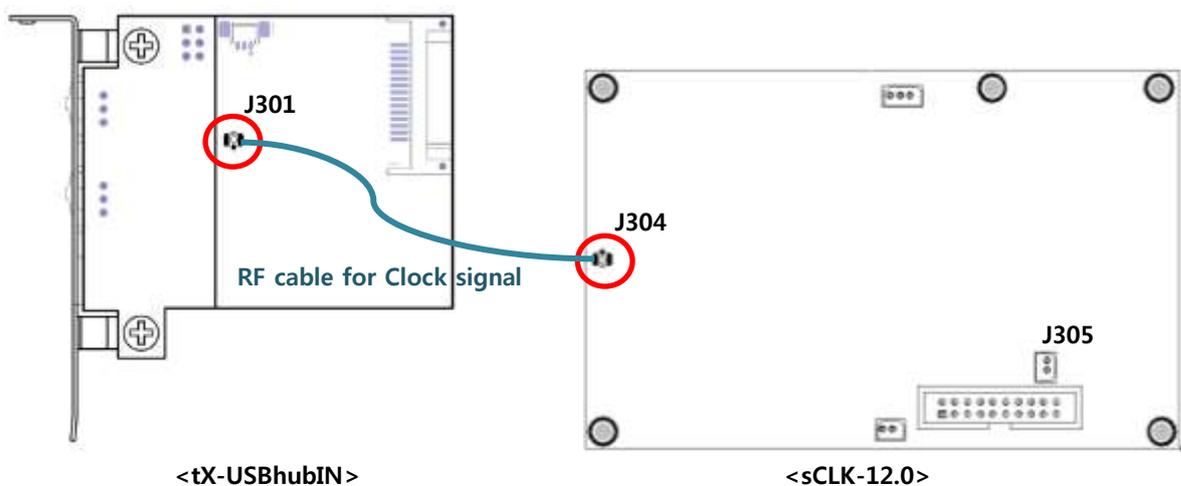


4 Close the PC case and connect one of tX-USBhubIN USB ports to a USB device and the combo will operate automatically without installing the driver once PC is powered on.

How to install tX-USBhubIN with sCLK-12.0

Block Diagram

- Using the internal PC power

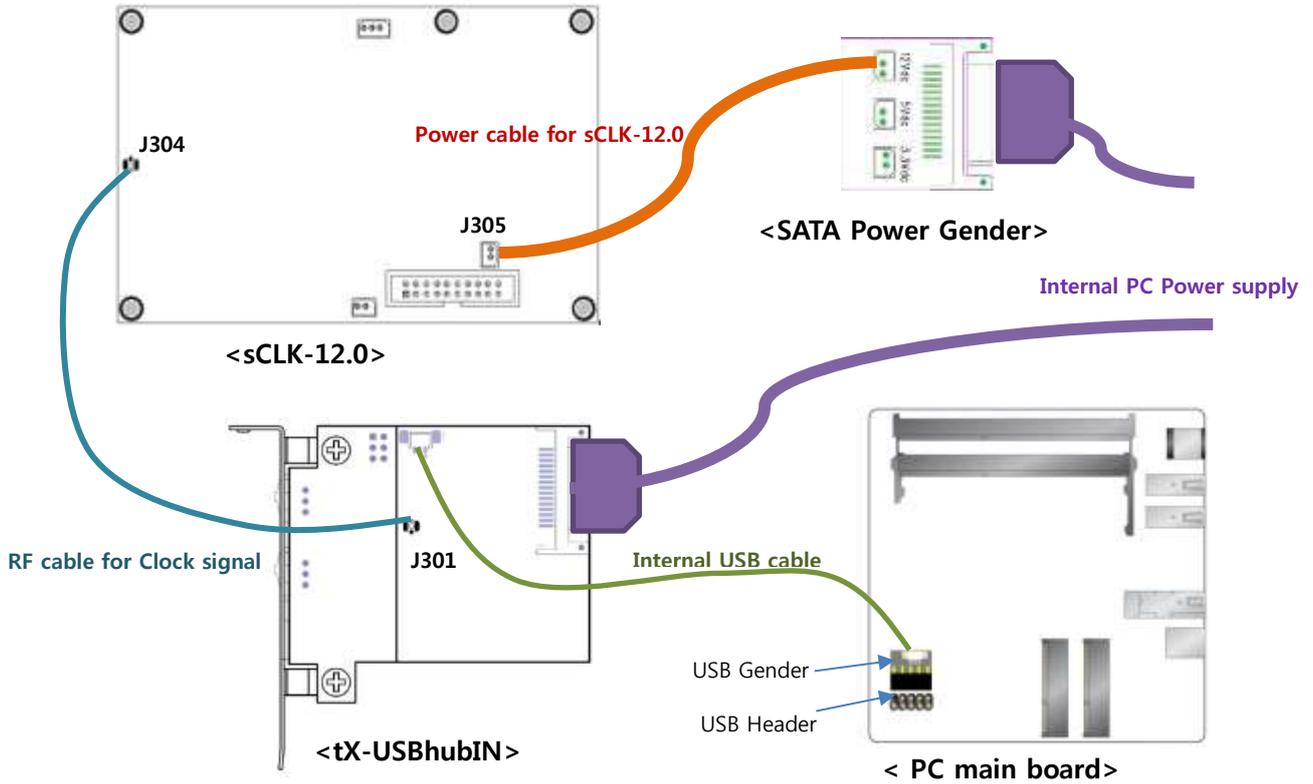

- Using the external power

